





Maintenance Manual

Primo Premium, Eclipse Premium Homogeneous Vinyl

Modern day—room cleaning aims at a reduction of wet cleaning procedures and their replacement by drier cleaning techniques. For example is the usage of pre—impregnated mops laundered centrally as well as full usage of appropriate machines to prefer.

This makes work easier for the cleaning staff, is more effective and influences the environment as little as possible. Less cleaning chemicals and less fresh water are used.

This way the cleaning procedures yield improved results of a constant quality. Premium flooring by Tarkett has a PUR reinforced wear layer which minimizes the use of cleaning chemicals.

Initial Site Cleaning

- Always protect the floor with thick paper, hard board or similar during the construction period. An
 initial site clean is always to be recommended before using the new flooring:
 - Lightly soiled floors: Vacuum, sweep or damp—mop the area to remove loose dirt and building dust. A combined scrubber/dryer with brushes or white/yellow pads are very effective to clean large areas. Use solution with low pH, to be able to pick up dust from construction work.

General Advice

- Resilient floors are damaged by solvents.
- Wipe up any spilt oil immediately because it may damage the surface.
- Black rubber wheels and rubber feet can discolour.
- All chair legs must have protective feet.
- Remember that light colours need more frequent cleaning.

Daily Cleaning





Resilient floors are damaged by solvents.





- Machine cleaning: In order to achieve good results, clean the floor gently with a combined scrubber—dryer machine and medium hard brushes or preferably red pads.
- Cleaning chemicals: If wet cleaning is necessary, use a neutral floor cleaner. Wet—rooms may
 necessitate occasional cleaning with acidic cleaning agents, pH 3 to 5, in order to remove residual
 lime and soap.
- Warning! Always follow dosage instructions carefully!
- Removing marks: Treat marks immediately. Use white/red nylon pads moisted with methylated spirits, cleaning spirit or neutral detergent.
- Wipe one more time with clean water.





Preventive Care

- Use correctly dimensioned entrance matting to remove dirt in the entrance area. About 80% of all the dirt on the floor that has to be cleaned off is brought in from outside. And 90% of that can be avoided by effective and correctly dimensioned entrance matting.
- The less dirt that comes in through the entrance, the lower the maintenance requirements.

Periodical Cleaning





• Maintenance: In most areas dry—buffing is a suitable method to restore the floor surface. It is best to dry—buff right after you have machine cleaned the floor. Dry—buffing limits renewed soiling. Be sure to use correct type of pad. Best result is received between 500 to 1000 rpm and red pad. The higher the speed, the higher the gloss. Dry—buff frequently according to the amount of wear. If above maintenance regime does not meet your expectations in terms of shine or overall appearance a suitable polish, spray polish or floor maintainer system might be used. Contact your supplier for a detailed specification.







Heavy wear and soiling necessitates machine cleaning Apply the cleaning solution (a fairly strong cleaning agent, pH 10-11 after dilution) to the flooring and allow to penetrate for 5-10minutes. Clean the floor using a heavy single scrub machine andred cleaning pad. Vacuum away the dirty water immediately. Rinsewith clear water. Allow the floor to dry and then apply the maintenancesystem as per the instructions above.

Ahmadabad:

Surface Plus, GF, 4th Floor Premier House, Opp. Gurudwara Thaltej Crossing, Ahmadabad – 382 454 Tel: +91 79 4006 0521 / 79 2685 3312 Email: ahmadabad@squarefoot.co.in

Bengaluru:

#51, 1st Floor, 100 Feet Road 4th Block, Koramangala Bengaluru – 560 034 Tel: +91 80 4110 1012 / 13 Fax: +91 80 2563 3145

Email: bangalore@squarefoot.co.in

Chennai:

#96, 3rd Floor, Opp. Vani Mahal G. N. Chetty Road, T. Nagar Chennai – 600 017 Tel: +91 44 4550 8411 / 12 Email: chennai@squarefoot.co.in

Goa:

403, 4th Floor, Gera Imperium 1st Building, Behind KTC Bus Stand Patto Plaza, Panjim, Goa – 403 001 Tel: +91 832 243 7663 Email: goa@squarefoot.co.in

Hyderabad:

6 – 3 – 354/1, 2nd Floor, Stellar Sphinx Panjagutta Main Road, Road No. 1 Banjara Hills, Hyderabad – 500 034 Tel: +91 40 4003 7212 / 13 Fax: +91 40 4003 7214 Email: hyderabad@squarefoot.co.in

Indore:

154, 1st Floor Orbit Mall, A.B. Road Indore – 452 001 Tel: +91 731 498 1983 Email: indore@squarefoot.co.in

Jaipur:

2nd Floor, Plot No. 287, Vaishali Marg Gomes Defence Colony, Opp. Ktl Maruti Showroom Near Big Bazaar, Jaipur, Rajasthan – 302 021

Tel: +91 141 492 2396 Email: jaipur@squarefoot.co.in

Kochi:

2nd Floor Chakrampilly Estate NH Bypass, Palarivattom Thammanam PO, Cochin Kerala – 682 032. (Opp: Holiday Inn) Tel: +91 484 485 6173

Email: kochi@squarefoot.co.in

Kolkata:

#332, Homeland Mall 18B, Ashuthosh Mukherjee Road Kolkata – 700 020 Tel: +91 33 2455 4344 Email: kolkata@squarefoot.co.in

Mumbai:

9–11 Senapati Bapat Marg Lower Parel, Mumbai – 400 013 Tel: +91 22 4047 6211 Fax: +91 22 2497 6216

New Delhi:

M – 56, 2nd Floor, M–Block Market Greater Kailash Part II New Delhi – 110 048 Tel: +91 11 4052 5767 / 11 4050 4785 Email: delhi@squarefoot.co.in

Pune:

Classic Floorings & Interiors Pvt Ltd,
Office No. 201, 2nd Floor, Gagan Capital
Dhole Patil Road, Beside Ruby hall Clinic Exit Gate,
Landmark – Above Anna Idly & CCD
Pune – 411 001
Teles 201 00 4000 1000

Tel: +91 20 4000 1630 Email: pune@squarefoot.co.in

Area Representatives

Bhopal +91 82913 17558
Bhubaneshwar
Coimbatore +91 90032 56718
Guwahati +91 96749 93005
Nasik +91 86575 03355
Patna +91 98363 11556
Surat +91 97237 77887



Head Office:

Classic Floorings & Interiors (P) Ltd., Ground Floor, Raghuvanshi Mansion
Raghuvanshi Mills Compound, 9–11 Senapati Bapat Marg, Lower Parel, Mumbai – 400 013. Tel: +91 22 4047 6211 | Fax: +91 22 2497 6216