

Impact Sports – Installation Guide.



Installation Guide

Impact Sports



NOTA BENE:

In order to provide the customer with the best use of product, this installation guide has to be followed carefully to guarantee conformity and ensure sports performance. If not, Tarkett Sports will not be responsible for damages following installation.

Any use of the product for purposes other than the ones set out, in the condition of use, should be submitted to Tarkett for prior approval. If you need any further information, please contact your dealer who will provide you with the appropriate advice.

Choice of Laying Techniques

- The subfloor must be dry, flat, clean, strong and without cracks. Sports floor sub-floors: bumps and holes must not exceed 6mm under the 3m ruler.
- The moisture rate in the screed must be in accordance with the local requirements, i.e. in France < 4,5% (concrete) – in Germany < 2% (concrete); anhydrite in France and Germany 0.5%.....
- OmnisportsREFERENCE MULTI-USE, OmnisportsACTIVE, OmnisportsEXCEL and OmnisportsPUREPLAY are specially designed to be “loose-laid” (98% adhesive free). This is possible because a non-woven fibreglass core gives these products outstanding dimensional stability.
- If the subfloor doesn't meet the local standards, it will be necessary to flatten bumps and flashes with an adapted mortar and if needed to do a complete self levelling of the subfloor.
- Beyond 2% moisture rate (CCM method) or in case of rising moisture, to waterproof the subfloor by a screed made of epoxy resin (or equivalent) before self levelling.

Kind of sub construction	Accepted Moisture Rates	Best laying solution
Concrete	Local standard compliant	GreenLayor Glued installation (on a moisture resistant barrier or on a screed coat)
Concrete	>local std & <7%	GreenLayor installation over Tarkolay
Anhydrite	<0.5%	Green Lay & perimeter gluer or glued installation
Anhydrite	<1%	Installation over Tarkolay (acrylic glue)
Anhydrite	<1.5%	Installation over Tarkolay (reactive dual component glue)
Asphalt coated	Dry	Green Lay & perimeter gluer or glued installation
Asphalt coated	Dry	Glued Installation

Storage Conditions

Omnisportsrolls are to be stored horizontally, on a plain/flat, dry and without any ruggedness. They must not be stacked.



Positioning the rolls (for all the different kinds of installation)

- The temperature at the subfloor level must be 12°C (53°F) in the room and 15°C (59°F) on the subfloor.
- Mark out the axes of the arena/gymnasium on the floor.
- Position the rolls at this centre line, following the layout numbers (1-2-3-4.....)
- Start from the length axis and unroll the strips.
- Unroll in alternate directions (except for the wooden patterns), positioning the sheets 1cm away from each other till the end of the 24h relaxing period. If necessary, re-cut the selvage.

Let the Omnisportsrest for at least 24 hours before the sheets, edge-to-edge. During this time, the arena/ gymnasium must be kept within the temperature range specified above. Relative air rate moisture needs to be between 35 and 65%, this means that ventilation or in cold seasons, heating system must be running constantly.

The Different Kinds of Installation



NOTA BENE:


In case of GreenLay method, ensure that the temperature after installation is maintained between 10°C and 30°C.

GreenLay installation

Sheets are on the sub-floor using double sided adhesive tape – Tarkotape (double sided tape) ref 1551085 (1 roll = 152mm width x 321m, sold in 1 box of 12 rolls = 3841m). The main purpose of the double sided tape is to hold the selvage in place during the welding and prevent the hot air from the blowtorch from getting under the floor covering. The double sided tapes have to be carefully applied in order to avoid any deformation of the covering.

After taping down all the sheets (except for the central joint of the arena) directly to the sub-floor, the gluing of the external edges (at periphery of the gymnasium) should be handled as follows: 100cm² every meter. You will have to glue the central joint (25cm on each side). If you install two or three-coloured projects, you will have to glue the seams under the different colours.

You must also glue 18–20cm wide (spatula width) all around the edges of the trap doors. Do not forget that the subfloor must be dust free and without any tracks of oil.

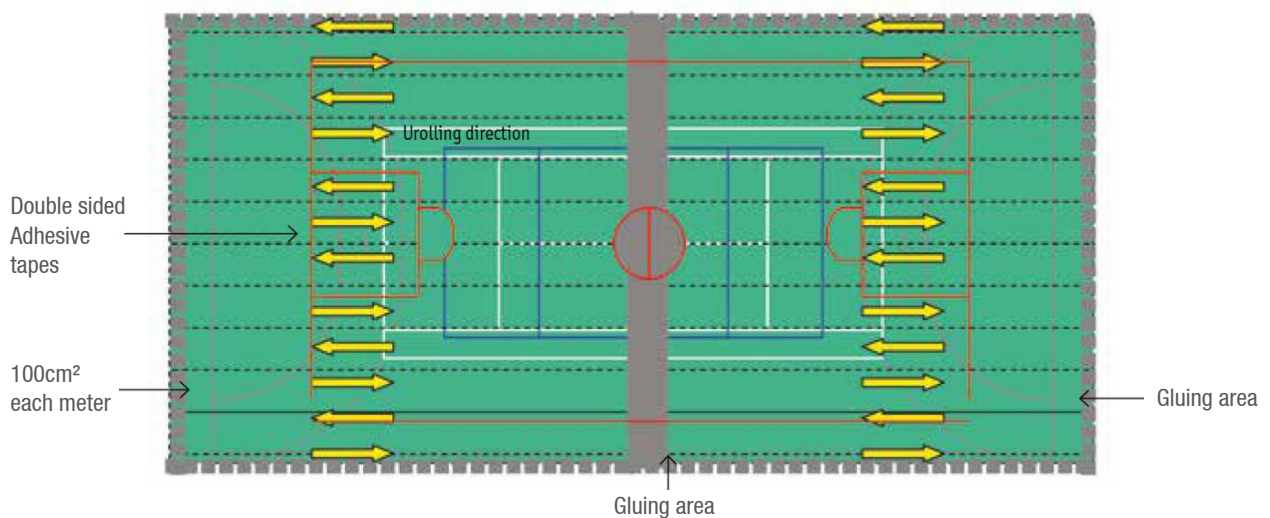

We recommend a dual-component epoxy glue, GreenLay Glue, reference Component A 1551057 Component B 1551058 – quantity to be applied, with a thin set of teeth spatula, between 300 and 350 gr per sqm. For a good installation you must carefully follow the manufacturer recommendations in particular, the waiting time before applying the covering. Then the surface with a roller to eliminate any bubbles that might remain between the sub-floor and the covering.

In certain cases, gluing widthwise is also possible. Please get in contact with your technical service for any question or assistance.



NOTA BENE:

In case of glued method, ensure that the temperature after installation is maintained between 10°C and 40°C.

Glued Installation

Sub-floor must be clean, dry, smooth, un-cracked, compression resistant and free of any material that could prevent from a good adherence.

Roll halfway back the sheets carefully of the first half of the gymnasium. Avoid moving the sheets from their original positions.

Apply the glue to the uncovered half of the sub-floor, starting with the centerstrips and working outwards. Glue two or three sheets at the same time.

Apply the glue to the sub-floor in even coats. In order to ensure that the glue is properly transferred to the back of the floor covering, do not glue too large an area at any one time. For a normal absorbent sub-floor, glue consumption is about 250–300gr/sqm with a thin toothed spatula (TKB A2).

Important notice: Only glue the adequate surface of floor covering –considering the drying time –in order to make the glue transfer effective.

Lay the covering on the sub-floor after the setting time specified by the glue manufacturer. Then you will have to eliminate the air bubbles that can be located between the sub-floor and the covering by using first a pressing tool then a 50kg roller. This will enable the glue to transfer perfectly on the floor covering.

Don't leave any heavy load on the floor covering during the complete glue drying time (72h).

Important notice: Use only adhesives recommended by Tarkett. For more information, please refer to the list of recommend adhesives available on: <https://professionals.tarkett.com>



NOTA BENE:

After installation over Tarkolay, ensure that the temperature is maintained between 10°C and 40°C during the full lifetime.

Installation over a Tarkolay

This kind of installation concerns with sub-floors where moisture rate do not exceed.

The sub-floor must be carefully swept and dusted. Unroll the Tarkolay in the same direction as the Omnisport on the clean sub-board, with studs on subfloor side, and align the strips edge to edge. If you might have to cut a roll and join it with another one, do not forget to tape the short ends of the two sheets together on their backside, using a single sided tape. Leave a 5mm ventilation gap on the boundary of the gymnasium.

Glue the Tarkolay directly on the sub-floor on the edges of the gymnasium, the gluing area must be 100cm² every meter, we recommend for this specific operation : GreenLayGlue. Glue should be laid between 300 and 350gr/sqm with a thin toothed spatula (TKB A4). Glue also 18–20cm wide (spatula width) all around the edges of the trap doors. Eliminate the air bubbles that can be located between the sub-floor and the covering by using first a pressing tool then a 50kg roller. Please follow the manufacturer's recommendations. The junction of the Omnisports REFERENCE MULTI-USE or EXCEL strips must not be stacked on top of the Tarkolay's ones; a 50cm gap is recommended.

Unroll in alternate directions (except for the wooden patterns), positioning the sheets 1cm away from each other till the end of the 24h relaxing period. If necessary, re-cut the selvage. Let the Omnisports rest for at least 24 hours (without any heavy load) before repositioning the sheets edge-to-edge, cutting and gluing the sheets.


Prepare the installation in the same way previously recommended in the "glued laying" paragraph. There is however an important difference between each method; for the gluing of the Omnisports REFERENCE MULTI-USE, Omnisports ACTI, EXCEL & PUREPLAY on the Tarkolay, you should take into account the moisture rate of the sub-floor:

Omnisports should be glued with a technical acrylic adhesive (specific for PVC over PVC), according to manufacturer recommendations. Quantity of glue laid should be 200 gr/m² with a thin toothed spatula (TKB A4).

The Welding of Omnisports Reference Multi-use, Omnisportsactive, Excel & Pureplay (Common to the Three Kinds of Installation)

The Trimming

This operation should be performed by using an electric tool with a “U” shaped blade as described, for any 5mm diameter welding rod the width of mill must be 4.3mm and maximum depth 2.5mm.

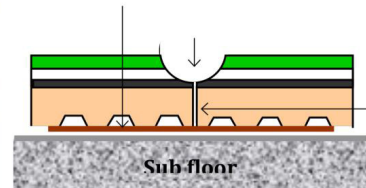


The welding

We strongly recommend, for this operation, an automatic cart (Leister or similar), which will produce more regular, professional quality welds.


Before welding the Omnisports, first of all, try to weld on an apart piece of product, in order to check that the temperature, the pressure and the speed of this material enables to perform a good welding conditions. To obtain an optimum result, we recommend to set the temperature on 450°C, 2m/min.




Cutting back the bead



Weld is hot (The presence of a small bump indicates the perfect level of fusion of the welding rod).



First trim before cooling



2nd trim after cooling

Tool required for trimming: “Quarter moon” knife or knife with the cutting guide.

Painting game lines

1 Permanent marking:

Kipp-Indoor paint 2K –www.kipp-markierungen.de

Conipur45 –BASF AG–phone number +41 58 958 22 44 –www.conica.com

Follow the manufacturer’s installation recommendations.

Other line paintings can be compatible with the Omnisportsfloor coverings. Please contact your technical service for any question or assistance.

2 Temporary marking lines:

The producer of these tapes is 3M –reference 471 –5cm width –www.3M.com

Follow the manufacturer’s installation recommendations.

Ahmadabad:

Surface Plus, GF, 4th Floor
Premier House, Opp. Gurudwara
Thaltej Crossing, Ahmadabad – 382 454
Tel: +91 79 4006 0521 / 79 2685 3312
Email: ahmadabad@squarefoot.co.in

Bengaluru:

#51, 1st Floor, 100 Feet Road
4th Block, Koramangala
Bengaluru – 560 034
Tel: +91 80 4110 1012 / 13
Fax: +91 80 2563 3145
Email: bangalore@squarefoot.co.in

Chennai:

#96, 3rd Floor, Opp. Vani Mahal
G. N. Chetty Road, T. Nagar
Chennai – 600 017
Tel: +91 44 4550 8411 / 12
Email: chennai@squarefoot.co.in

Goa:

403, 4th Floor, Gera Imperium
1st Building, Behind KTC Bus Stand
Patto Plaza, Panjim, Goa – 403 001
Tel: +91 832 243 7663
Email: goa@squarefoot.co.in

Hyderabad:

6 – 3 – 354/1, 2nd Floor, Stellar Sphinx
Panjagutta Main Road, Road No. 1
Banjara Hills, Hyderabad – 500 034
Tel: +91 40 4003 7212 / 13
Fax: +91 40 4003 7214
Email: hyderabad@squarefoot.co.in

Indore:

154, 1st Floor Orbit Mall, A.B. Road
Indore – 452 001
Tel: +91 731 498 1983
Email: indore@squarefoot.co.in

Jaipur:

2nd Floor, Plot No. 287, Vaishali Marg
Gomes Defence Colony, Opp. Ktl Maruti Showroom
Near Big Bazaar, Jaipur, Rajasthan – 302 021
Tel: +91 141 492 2396
Email: jaipur@squarefoot.co.in

Kochi:

2nd Floor Chakrampilly Estate
NH Bypass, Palarivattom
Thammanam PO, Cochin
Kerala – 682 032. (Opp: Holiday Inn)
Tel: +91 484 485 6173
Email: kochi@squarefoot.co.in

Kolkata:

#332, Homeland Mall
18B, Ashuthosh Mukherjee Road
Kolkata – 700 020
Tel: +91 33 2455 4344
Email: kolkata@squarefoot.co.in

Mumbai:

9–11 Senapati Bapat Marg
Lower Parel, Mumbai – 400 013
Tel: +91 22 4047 6211
Fax: +91 22 2497 6216

New Delhi:

M – 56, 2nd Floor, M–Block Market
Greater Kailash Part II
New Delhi – 110 048
Tel: +91 11 4052 5767 / 11 4050 4785
Email: delhi@squarefoot.co.in

Pune:

Classic Floorings & Interiors Pvt Ltd,
Office No. 201, 2nd Floor, Gagan Capital
Dhole Patil Road, Beside Ruby hall Clinic Exit Gate,
Landmark – Above Anna Idly & CCD
Pune – 411 001
Tel: +91 20 4000 1630
Email: pune@squarefoot.co.in

Area Representatives

Bhopal	+91 82913 17558
Bhubaneshwar	+91 96742 23380
Coimbatore	+91 90032 56718
Guwahati	+91 96749 93005
Nasik	+91 86575 03355
Patna	+91 98363 11556
Surat	+91 97237 77887

**Head Office:**

Classic Floorings & Interiors (P) Ltd., Ground Floor, Raghuvanshi Mansion
Raghuvanshi Mills Compound, 9–11 Senapati Bapat Marg, Lower Parel, Mumbai – 400 013. Tel: +91 22 4047 6211 | Fax: +91 22 2497 6216